byonoy

Instructions for Use
Absorbance 96 App

App version 1.3

(CE

TABLE OF CONTENTS

1   General information

The Absorbance 96 App is to be used only in combination with the Absorbance 96 reader. The Absorbance 96 App is not a stand-alone product. Please also refer to the separate operating instructions for the Absorbance 96 reader.

The Absorbance 96 App is only compatible with the Absorbance 96 reader. The safeties, precautions and validations included in the Absorbance 96 App have only been tested for the Absorbance 96 and shall not be used for any other purpose on any other device.

In this manual, particularly important remarks are labeled as followed:

Warning:

⚠️   **This is a warning that indicates an immediately or potentially dangerous situation, which, if not avoided, will result in death or serious injury.**

Caution:

🖐️   **Caution indicates a potentially hazardous situation, which, if not avoided, could result in minor or moderate injury.**

Information:

ⓘ   **This is a piece of information indicating certain properties that must be observed.**

About this manual

Important: Follow the instructions for use

This user manual may only be used according to its intended purpose. It may not be reproduced, changed, or translated in another language without the prior written consent of Byonoy GmbH.

This document is subject to technical changes and updates.

ⓘ   **Ensure that the manual is always accessible and is read and understood by all persons operating the instrument.**

ⓘ   **The latest version of this manual is available via the Absorbance 96 App.**

2   App installation procedure and updates

The Absorbance 96 App is compatible with Microsoft Windows (Windows 7 or above) and Mac OS (High Sierra 10.13. or above).

To install the Absorbance 96 App, visit the following webpage: s.byonoy.com/abs96. Download the latest version of the App for your operating system and follow the steps in the Setup Wizard to complete the installation.

Modern operating systems offer plug and play functionality. Older operating systems may require manual installation of the drivers. The drivers for Windows are available at s.byonoy.com/abs96.

> (i)   **To install the proper drivers and software on the computer, the user must have administrator rights or obtain such permissions.**

Uninstalling the software

The Absorbance 96 App can be uninstalled using the computer's standard uninstall procedure.

Updates

To check for new updates, click the "Update" button in the lower left corner. If an update is available, this will be shown in a bar at the top of the screen.

3 Absorbance 96 App overview

The Absorbance 96 App is used to operate the Absorbance 96 reader and process the results. After the app is started and the reader is connected, the main window appears automatically.
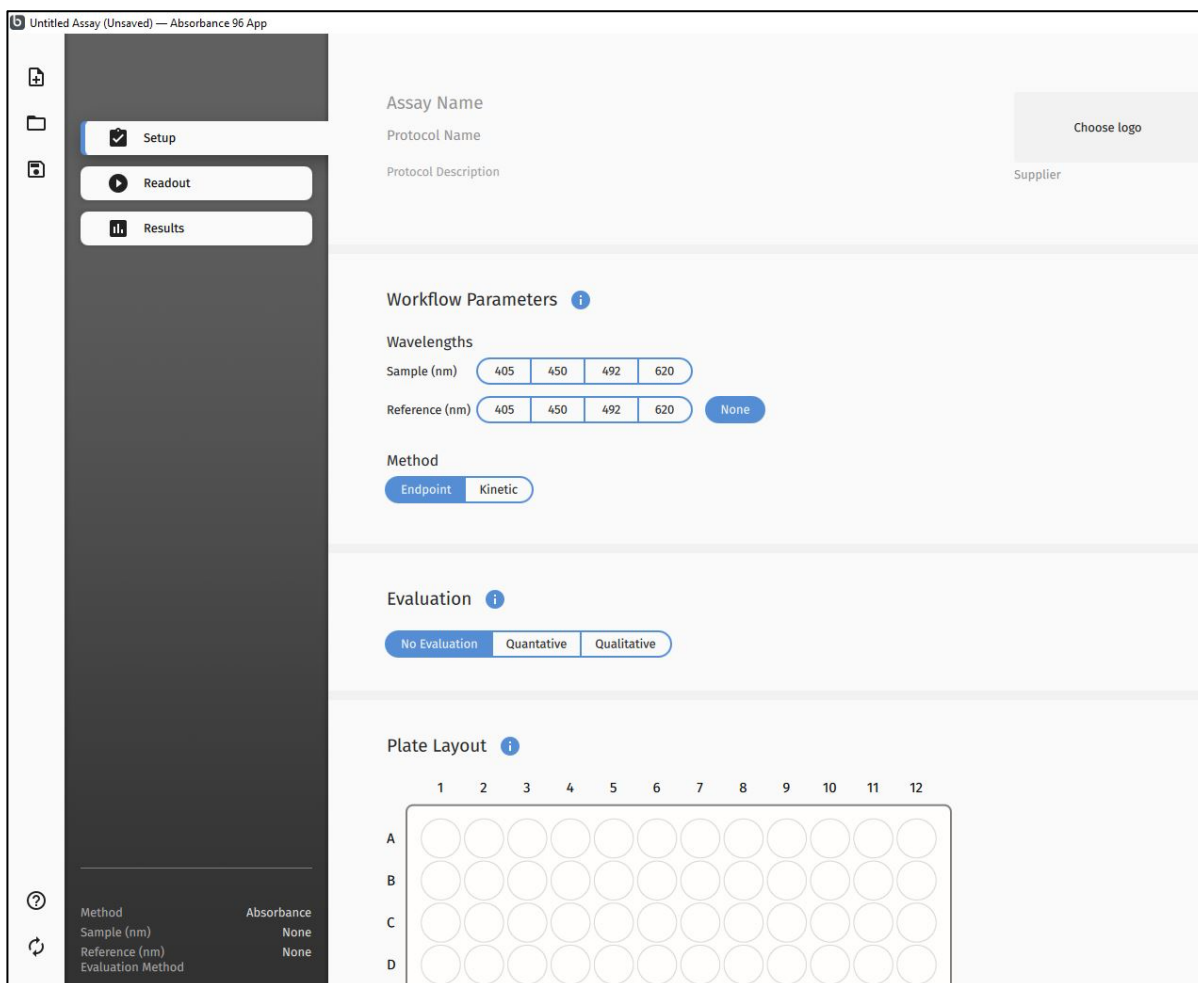
Figure 1. Main window.

Icons in the leftmost menu bar (from top to bottom):

1. New: Start creating a protocol and/or assay.
2. Open: Open a previously saved protocol or assay.
3. Save As: Save a current protocol or assay.
4. Manual: Redirection for downloading the user manual.
5. Update: Update the app.

File Types

The following file types are used by the Absorbance 96 App:

Table 1. File Types in the Absorbance 96 App

Description	Extension
Protocol	.byop
Assay	.byoa
Export	.csv/.pdf

The protocol file type .byop allows to save settings and to load predefined protocols for re-peat assays.

The assay file type .byoa is used to save completed assays. In addition to the settings, the results of the assay are also saved.

4   Operation

4.1   Set up an assay and create a protocol

Select "New" from the menu bar. Your experiment conditions can now be defined.

Workflow Parameters

1.   Wavelengths

Under "Wavelengths", a signal and reference wavelength (both in nanometers) may be chosen.

The signal wavelength is the wavelength at which the principal measurement will be run.

The reference wavelength is an additional wavelength at which the device will measure and whose results will be subtracted from the values measured at the signal wavelength. If no reference wavelength is desired, click the "None" button beside the reference wavelength.

2.   Readout Method

Select your readout method, either Endpoint or Kinetic.

ⓘ   **The kinetic readout method is not available for every reader type.**

To perform kinetic measurements and avoid misinterpretation of the results, observe the following instructions:

ⓘ   **Ensure constant environmental conditions, i. e. constant ambient temperature and humidity.**

ⓘ   **Acclimatize the connected reader and microtiter plate to the ambient temperature for at least 1 hour.**

ⓘ   **A signal drift of about 1 mOD per hour might be observed.**

Kinetic Rapid Mode

Upon selecting kinetic mode, you can choose "Enable Rapid Measurement". In this mode, the hardware is no longer performing the additional verification step and results can therefore be delivered in about 3 sec. intervals.

ⓘ   **Enabling Rapid Measurement may affect the accuracy, linearity and reproducibility of the measurement.**

3.   Evaluation

The evaluation section allows to choose which evaluative method will be used for the readout.

No Evaluation

No evaluation will be used. Only the OD values will be shown.

Quantitative

Upon selection of the quantitative evaluation method, a drop-down menu will appear. Here, a fitting method can be chosen. The selected fitting method will be used for the standard curve and the data analysis.

Predefined standard curve

In a quantitative assay, a predefined standard curve can be used to determine the concentrations of a new set of samples with identical experiment parameters. After selecting the checkbox "Use predefined standard curve", you may enter the curve parameters manually or load a standard curve from a previous assay.

ⓘ   **After selecting the checkbox "Use predefined standard curve", you cannot assign any new standards.**

ⓘ   **In a quantitative assay, the standard curve is a function of various assay parameters, such as the temperature, timing, or age of the assay kit. Before using this feature, it is advisable to validate your assay for compatibility.**

ⓘ   **As the above-mentioned experiment conditions are subject to change, it is recommended to use a new standard curve when performing a new assay.**

Qualitative

Upon selecting the qualitative evaluation, an editor will appear that allows for the definition of the parameters for the qualitative evaluation.

**Figure 2.** Editor for qualitative evaluation

Terms for the Editor:

- Input Formula: the input to be used for the evaluation.
- Limit Formula: definition of the evaluation boundaries. The limit can be entered as a constant value or as a formula.
- Positive: the designation for values above the limit
- Negative: the designation for values below the limit

To add an intermediate area between the positive and negative fields, hover with the cursor over a given field, whereupon a "+" symbol will appear. Click to add the intermediate field.

To define your evaluation, klick on the "fx" field under "Input Formula". The Formula Editor will open and you can enter the desired formula.
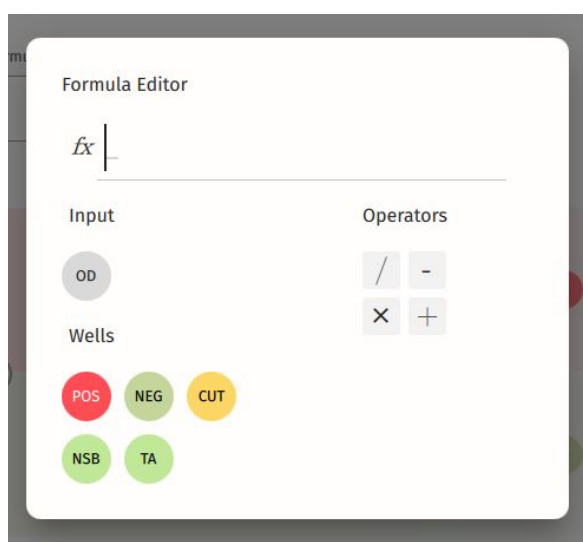
Figure 3. Formula Editor

Terms for Formula Editor:

- fx: the entry field for the input formula
- Input: the selected input for the formula
- OD: input the measured values in OD from each well
- Operators: mathematical operators to build the desired formula
- Wells: well-specific controls
- POS: input the mean of the positive controls
- NEG: input the mean of the negative controls
- CUT: input the mean of the calibrator or cut-off control

All input formulae must contain OD. If no formula is desired, the input will be solely OD.

Example 1

A simple formula may take the form:

Cut-Off Value = mean negative controls + 0.2,

To enter this formula, set the following:
Input Formula = OD
Limit Formula = NEG + 0.2

Figure 4. Simple formula for cut-off

Example 2

A more complex formula, for example, for the representation of values as a percentage of the negative control, or the percent inhibition, the entries for the qualification would be as follows:

Inhibition = (1-(ODsample/ODnegative control))*100

The figure below shows the input for the percent inhibition calculation, where samples greater than or equal to 30 % would be designated positive.
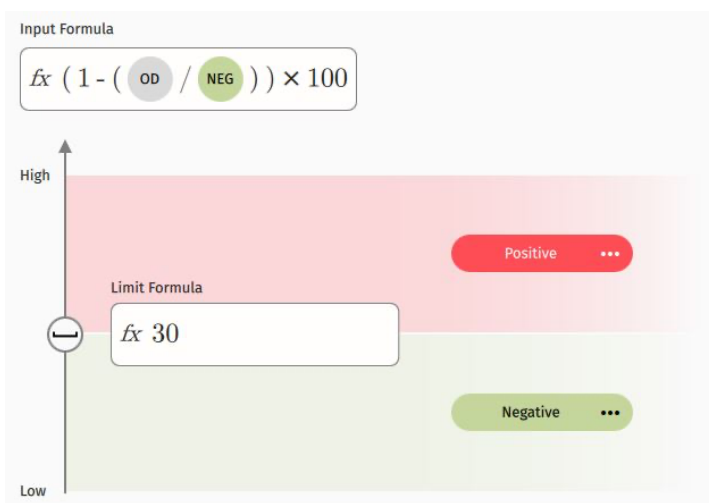
Figure 5. Formula for calculation of percent inhibition

Note: click the bracket symbol to switch the direction of the limit inclusion.

> ⓘ The examples shown in this manual do not represent actual data, rather function to clarify software features, and may not be referenced for experimental methods or procedure.

Plate Layout

In the plate layout section, samples, standards, blanks, and controls can be defined. Select the type from the options below the plate layout; click and drag to define. Duplication patterns allow the user to define multiple replicates for samples and standards.

> (i) The format of the plate layout and the corresponding buttons are defined by the evaluation method. Quantitative and qualitative evaluations have different fields and buttons.

> (i) When replicates are defined, the mean value is used for the calculations.

In the plate layout for a quantitative assay, a field is provided where the concentrations of the standards and the samples can be entered. The unit can be entered manually or chosen from the dropdown menu. Using the dilution factor, diluted samples can be used, and the software will calculate the undiluted concentration.

B0 control

B0 is a specific denomination of zero standard controls in competitive ELISAs. If B0 is chosen, its value is used to reference the relative binding in a sample or standard to the maximum possible binding. This ratio is referred to as the percentage of binding %B0.

Create a protocol

Once the parameters of a given experiment have been set, these settings may be saved as a protocol. All parameters, such as wavelength and plate layout, will be saved.

4.2   Readout of the assay

Once all settings have been completed, the read out can be started. The app will automatically guide the user through the readout process.

4.3   Results

After a successful measurement, the results section will open automatically. The results are displayed in different views:

Plate view: Provides an overview of the different OD values in their respective wells. Undefined wells are not shown. Click on a given well to see the OD value, label, and, if applicable, concentration.

Graph view: A representation of the data will be shown on the graph. The standard curve is dependent on the fitting method chosen. By choosing the right fitting method, the distance between the curve and each point is minimized. Using the standard curve, the concentration of each sample is calculated. The equation below the graph reflects the fitting method applied and offers further data.

Tabular view: Provides an overview of the various samples, wells, OD values, and calculations.

Table 2. Overview of terms, tabular view section

Parameter	Description
ID	The assigned ID of a given standard
Well	The assigned well
Absorbance (OD)	The absorbance reading in OD units
Mean Absorbance (OD)	The mean OD value of replicate wells
Concentration %CV*	The coefficient of variation between replicates
Standard Concentration*	The entered concentration values for the standards
Concentration*	The calculated concentration values
Result**	Pos/Neg/Intermediate result of a qualitative experiment
Input Value**	The calculated value from the input formula

(* Only appears for quantitative evaluations, **Only appears for qualitative evaluations)

Export

Export the results as a .pdf or .csv file.

EG-Konformitätserklärung
EC-Conformity Declaration

$$CE$$

Byonoy GmbH – Schützenstraße 21 - 22761 Hamburg - Germany

Das bezeichnete Produkt entspricht den einschlägigen grundlegenden Anforderungen der aufgeführten EG-Richtlinien und Normen. Bei einer nicht mit uns abgestimmten Änderung des Produktes oder einer nicht bestimmungsgemäßen Anwendung verliert diese Erklärung ihre Gültigkeit.

The Product named below fulfills the relevant fundamental requirements of the EC directives and standards listed. In the case of unauthorized modifications to the product or an unintended use this declaration becomes invalid.

Produkttyp
Product type

Absorptionsmessgerät
Absorbance reader

Typenbezeichnung
Type designation

Absorbance 96

Einschlägige EG-Richtlinien/Normen
Relevant EC directives/standards

2011/65/EU; 2014/30/EU;
DIN EN ISO 14971:2013-04; DIN EN 62366-1:2017-07; DIN EN 61010-1:2020-03;
DIN EN 61326-1:2013-07

Hamburg, 18.11.2021

Dr. Sebastian Metz

Dr. Yousef Nazirizadeh